Ceiling Fan: Model EV2075CF

INSTRUCTION MANUAL – IMPORTANT INSTRUCTIONS RETAIN FOR FUTURE USE - READ FULLY BEFORE USE

Pictures or product specifications may vary slightly from those indicated due to ongoing product improvement.

Safety Instructions

WARNING! A suitably qualified person - connection to the mains supply required, must install this fan.
This fan and associated equipment must be installed by a person who is suitably qualified to install electrical equipment that is permanently connected to the mains 230V mains power system as a condition of warranty. No responsibility will be taken for any damage or physical harm caused by incorrect installation.

Carefully read this manual in full before using this electric fan.
Ensure that you know how the fan functions and how to operate it. Maintain the fan in accordance with the instructions to ensure that it functions properly. Keep this manual with the fan. If the fan is to be used by a third party, this instruction manual must be supplied with it. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used. No liability can be accepted for any damage caused by non -compliance with these instructions or any other improper use or mishandling.

Package Contents

1 x Instruction Manual
1 x Fan Motor Assembly
1 x Set Fan Blades (4)
1 x Extension Tube
1 x Ceiling Base Plate Assembly
1 x Pack Blade Brackets (4)
1 x Pack Screws - Screw pack contains
4 Ceiling Base fixing screw / 4 split washer / 4 washer
12 Blade bracket fixing short bolt / 12 washer / 12 nut (1 set spare)

CAUTION. Confirm all parts before disposing of packaging. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

Assembly and Installation

Unpack and confirm all components.
This fan should be connected to a 10amp circuit controlled by a dedicated isolating switch, suitable means for disconnection must be incorporated in the fixed wiring circuit and all work is to be completed in accordance with the current wiring rules. There is an OFF position on the pull cord switch located on the motor assembly however this does not disconnect the fan from the mains supply permanently.
WARNING! Ensure the power is OFF before connecting to the mains supply.
Step 1. Fit blade bracket to each blade. **Note.** Blade decorative screen should face downwards on finished product. Attach blade bracket to the blade as shown in fig 1 and fig 2.
Step 2. Attach blades to motor assembly as shown in fig 3.
Step 3. Remove base cover from base plate.
Step 4. Screw base plate to ceiling using the screws supplied.
Step 5. Connect mains supply wires to terminal block (P - N - E). Warning. Ensure power is OFF. This appliance must be earthed.
Step 6. Place ceiling base cover over motor wires as shown in fig 4.
Step 7. Remove the fixing bolt and cir-clip from the lower end of the extension tube.
Step 8. Place the extension tube carefully over the fan motor wires, pull fully out the top of the tube and attach the extension tube to the motor assembly. Fit the cir-clip to the securing bolt as shown in fig 4.
Step 9. Connect the fan motor wiring to the terminal block. Ensure all earth wires are securely connected.

Note. This fan has internal wiring for an optional light attachment. This model is **not available** with a light attachment.

Wiring guide
Brown – Fan Live supply wire
Blue – Fan Neutral supply wire
Red – Spare Light (optional) supply wire
Green / Yellow – Fan earth supply wire

Step 10. Bolt the base cover plate to the base plate. Ensure that the extension tube is sitting correctly and the fan is hanging free.

Fig 1.

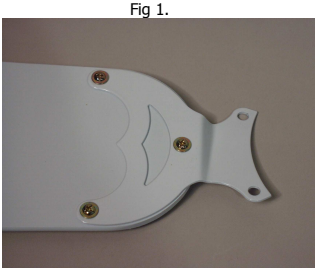

Fig 2.

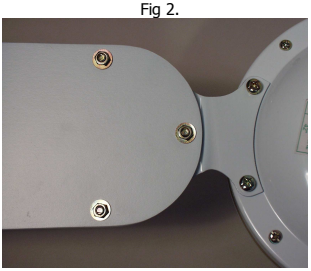

Fig 3.

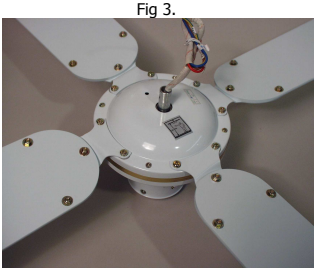

Fig 4.

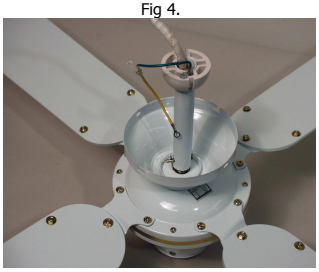

Operation.

The fan is now ready for operation. Turn the mains power switch supplying the fan to ON. Pull the pull cord to select OFF – LOW – MED – HIGH fan settings.

Reverse Function
For winter period the fan may be reversed to aid heating. To reverse the rotation of the fan alter the direction switch located on the fan assembly.

Warning! Ensure that all fan blades are securely fitted before use.
Warning! For fans installed at a high level. Ensure that the fan is installed so that the blades are more than 2.1m from the floor.
Warning! To reduce the risk of electric shock, do not use this fan with any solid state speed control device unless that device has been specifically supplied for this fan.
Warning! Avoid contact with moving parts.

IMPORTANT SAFETY INFORMATION

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury including the following.
Always check that the power supply corresponds to the voltage on the rating plate.
WARNING! A suitably qualified person - connection to the mains supply required, must install this fan.
This fan and associated equipment must be installed by a person who is suitably qualified to install electrical equipment that is permanently connected to the mains 230V mains power system as a condition of warranty. No responsibility will be taken for any damage or physical harm caused by incorrect installation.
Supply
This electric appliance must be connected to a suitable 230V ~ 50Hz power supply.

Children
Caution. Keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised by a responsible person to ensure that they can operate the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
Danger to children
Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.

CLEANING

Before cleaning.
When not in use or before cleaning, always disconnect the fan from the mains supply.
Warning! Ensure that the fan is switched OFF from the mains supply before cleaning or removing any guard.
Carefully wipe the outer surface with a damp cloth, dry with a dry towel. Do not use harsh abrasives, solvents, chemical cleaners, petrol or similar to clean this appliance as these may damage the plastics. Always replace any guard before use.
Store in a safe place
When not in use store your appliance and instruction manual in a safe and dry place.

Pictures or product specifications may vary slightly from those indicated due to ongoing product improvement.

Warranty

This product is for household use only. This product is guaranteed against faulty materials and workmanship for a period of 24 months from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from whom this product was purchased.

Model No.: _____ Purchase date:_____ Product Purchased From:_____

IMPORTANT!
Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged.